

Betriebsanleitung  
Operating Instructions  
Instructions de service  
Istruzioni d'uso  
Handleiding  
Instrucciones para el manejo  
Manual de instruções  
Naudojimosi instrukcija  
Kasutusjuhend  
Lietošanas instrukcija  
Driftsinstruks  
Driftsinstruktioner  
Käyttöohje  
Driftsvejledning  
Instrukcja obsługi

Kezelési útmutató  
Návod k obsluze  
Navodilo za uporabo  
Návod na obsluhu  
Upute za rad  
Manual de operatii  
Teoracha Oibriúcháin  
Οδηγίες χρήσης  
El Kitabi  
Инструкции за експлоатация  
Инструкция по эксплуатации  
取扱説明書  
사용설명서  
使用说明书

**DTLF 2.400**  
**DTLF 2.500**

2006/42/EG









DIN EN ISO 14001:2005

















DIN EN ISO 9001  
001929 QM

		<p><b>MAX. PRESSURE</b></p>	<p>mbar</p>
			<p>m<sup>3</sup>/h</p>
<p><b>AIR</b></p>		<p>DIN EN ISO 3744</p>	<p><math>L_{pA} = 79-81</math> dB(A) - 50Hz <math>L_{pA} = 81-82</math> dB(A) - 60Hz <math>K_{pA} = 3</math> dB(A)</p>

<p>420-608 kg 926-1341 lbs</p>	<p>A &gt; 400mm A &gt; 16"</p>	<p>&gt; 5°C/41°F &lt; 45°C/113°F</p>	<p>max. 90%</p>	<p>max. 800m</p>
<p>MIN 2x </p> <p>1</p>	<p>2</p>			

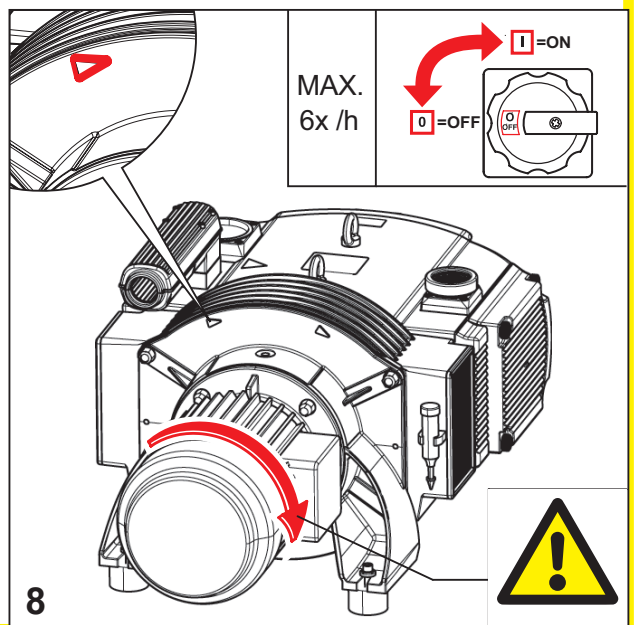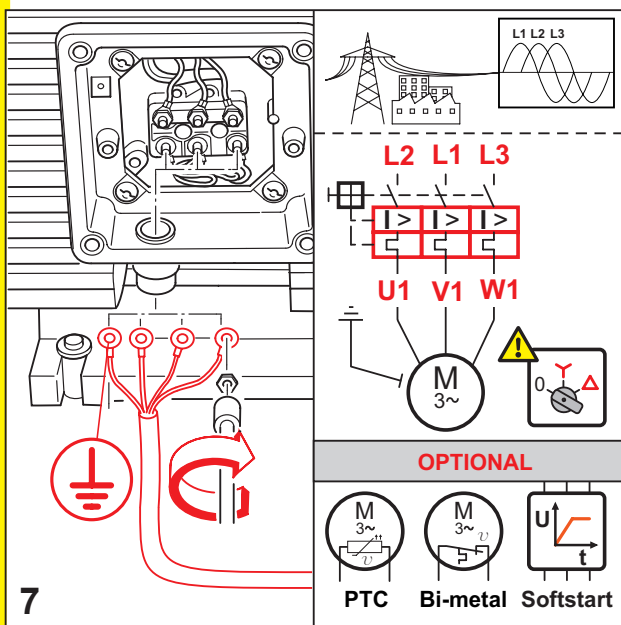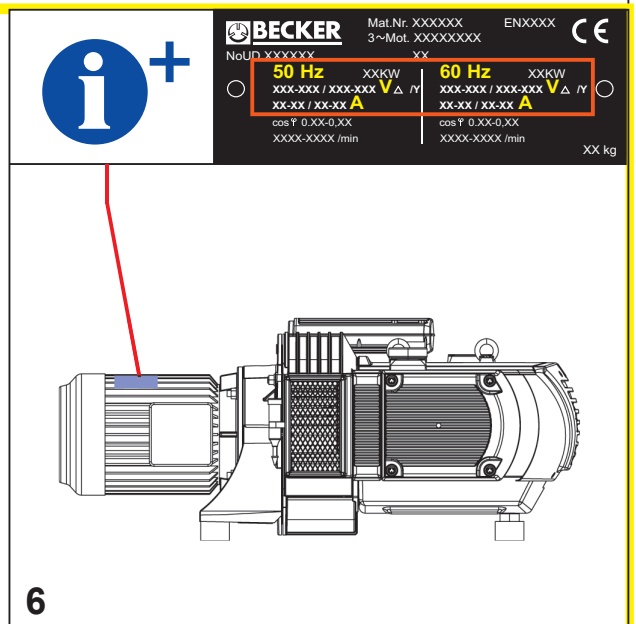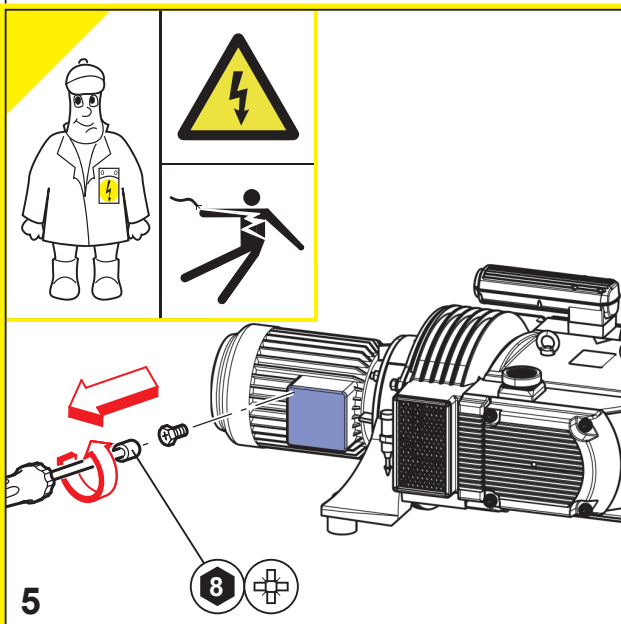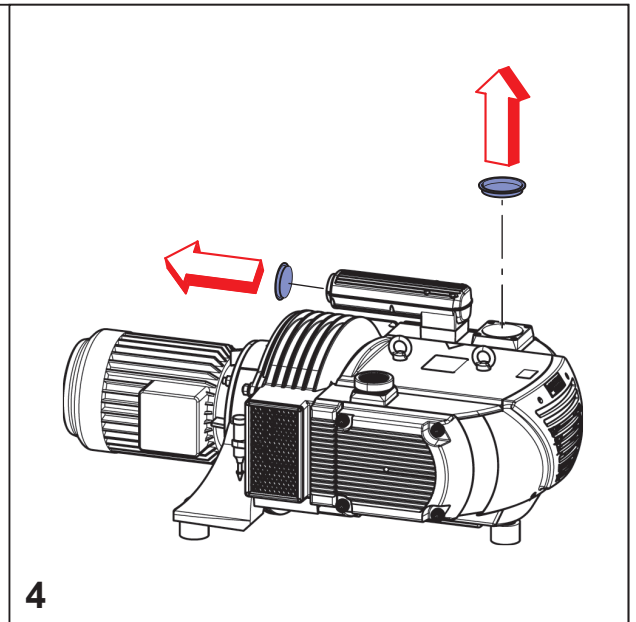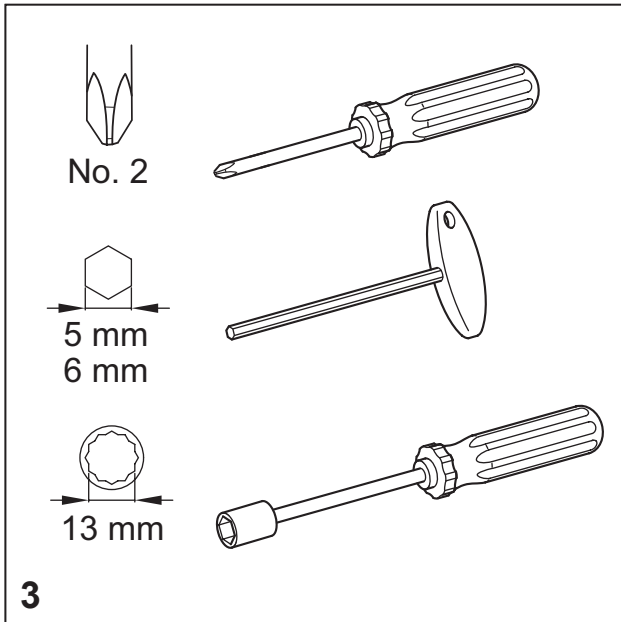

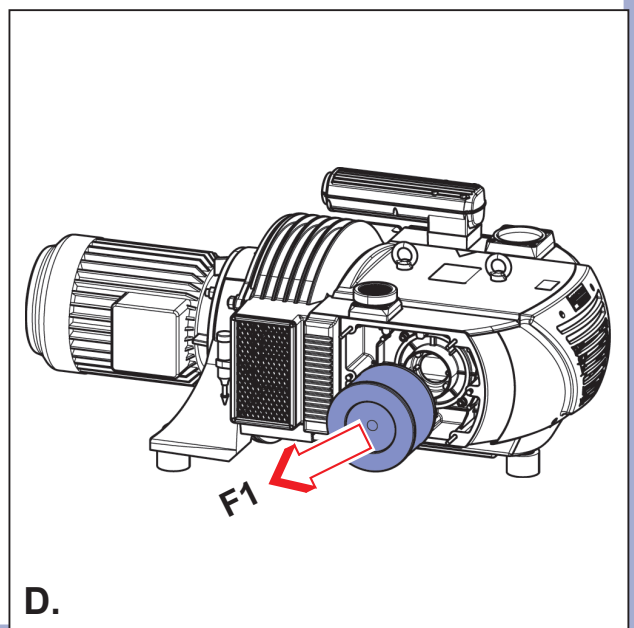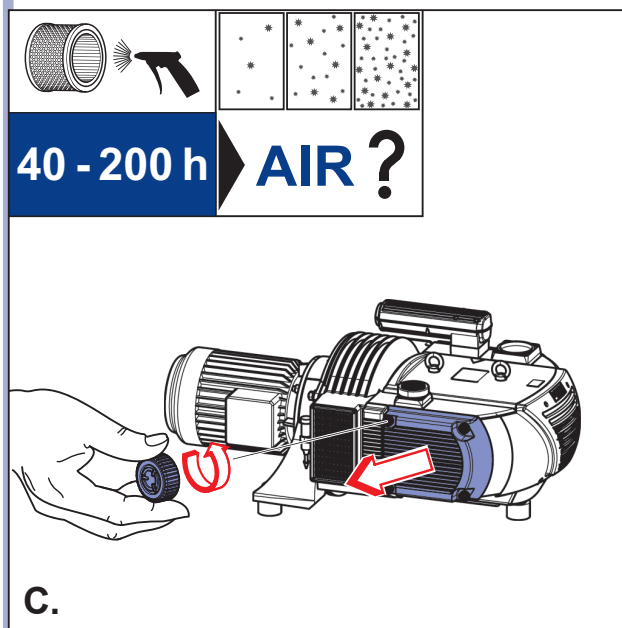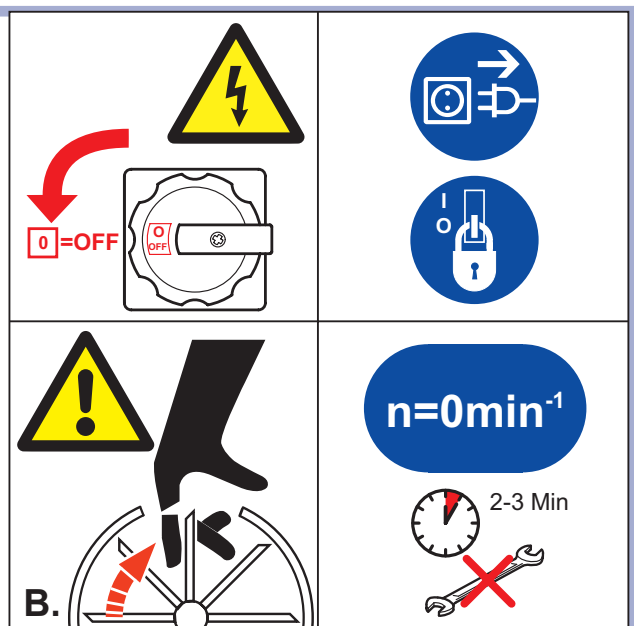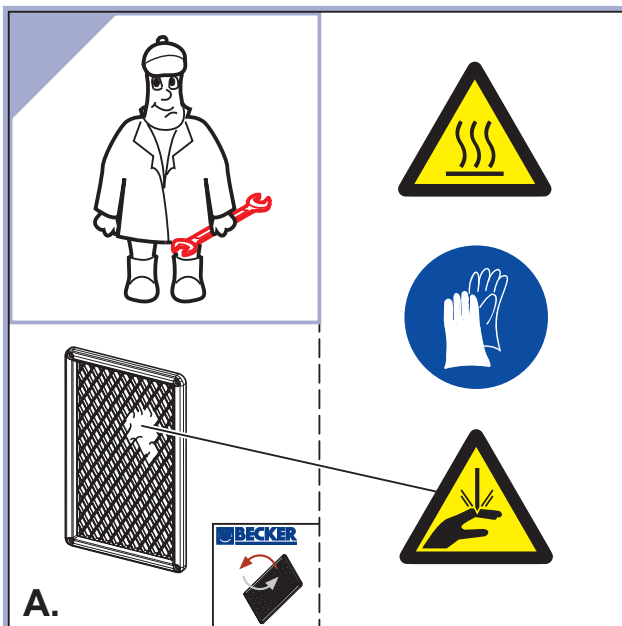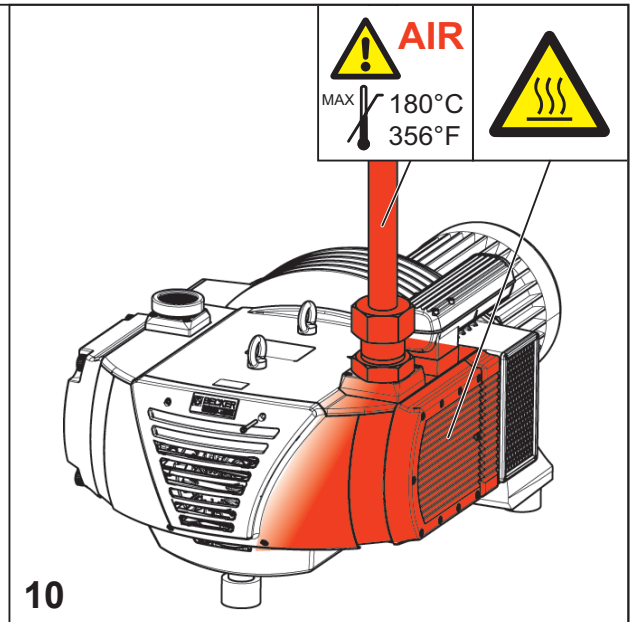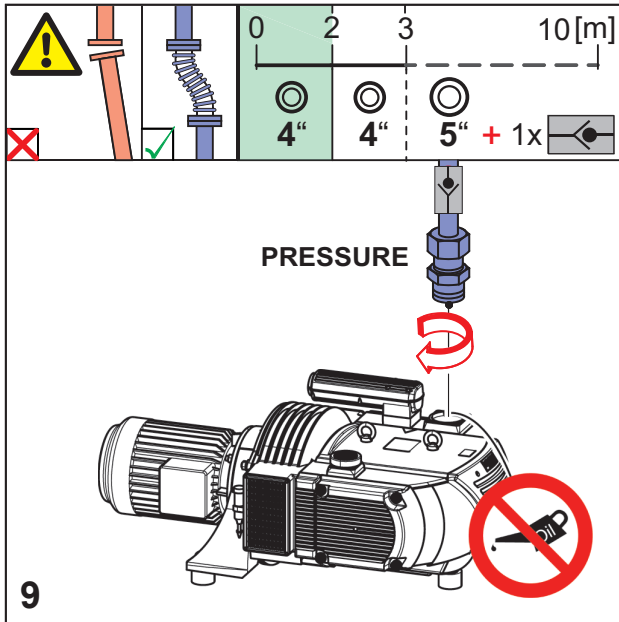

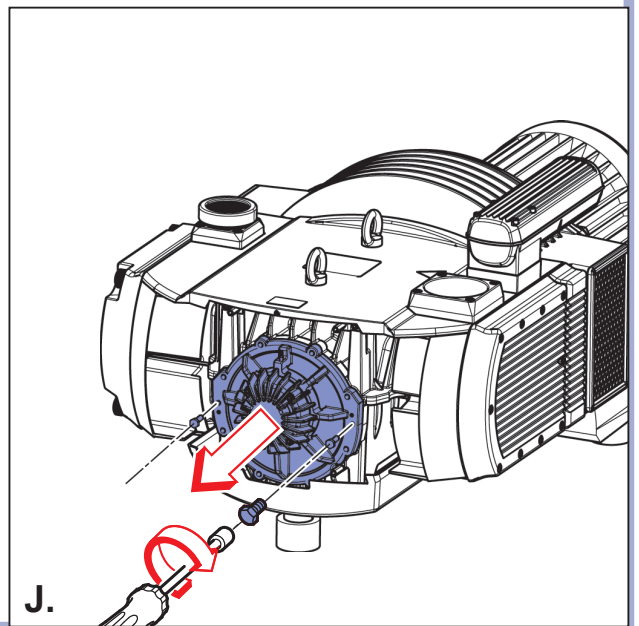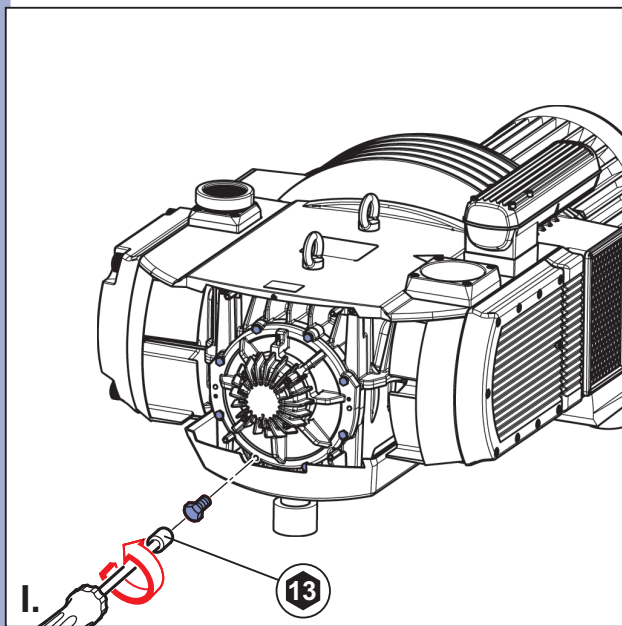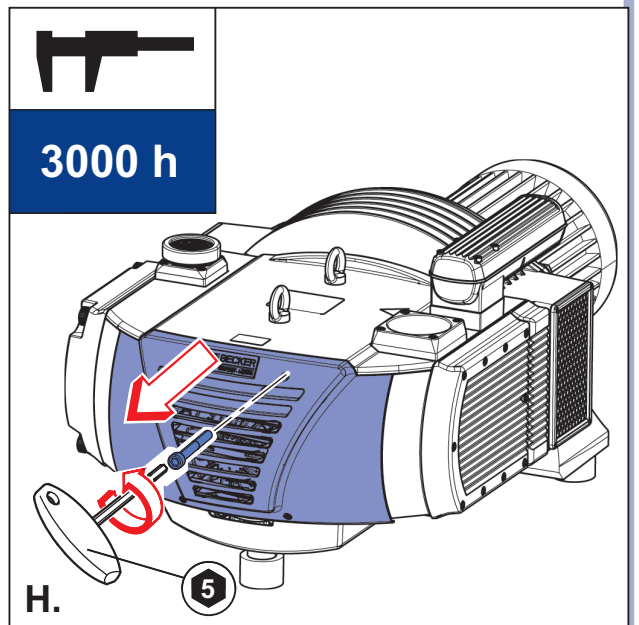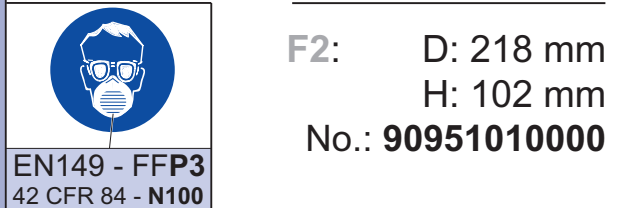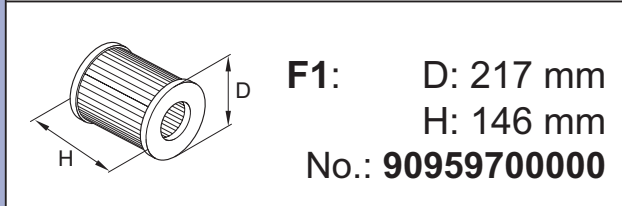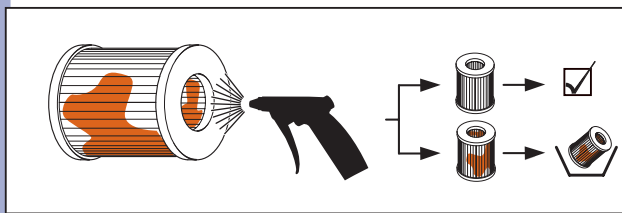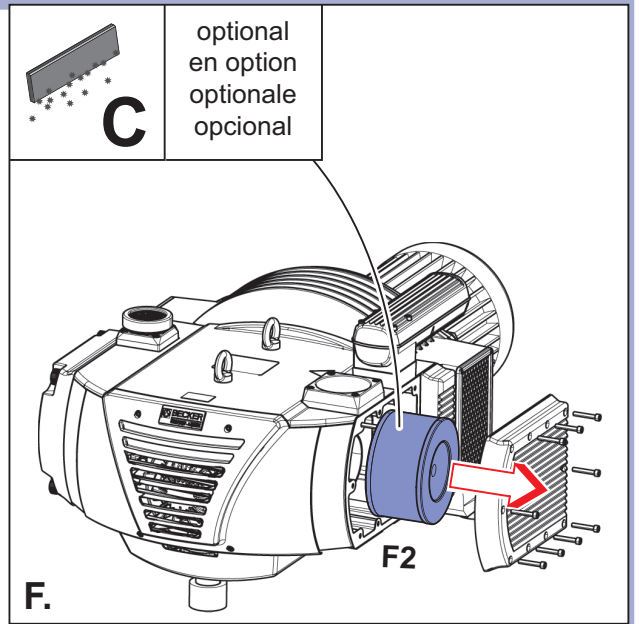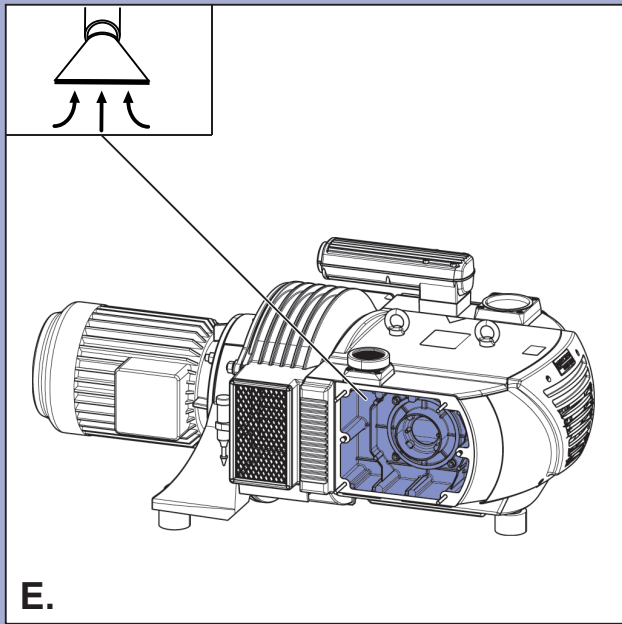







**A**

MAX.  
MIN.

$A_{MAX} = 88\text{mm}$   
 $A_{MIN} = 60\text{mm}$

$A < 60\text{mm}$  ⚠

DTLF 2.400/2.500 → No. 90137301008 (SET)  
**K.**

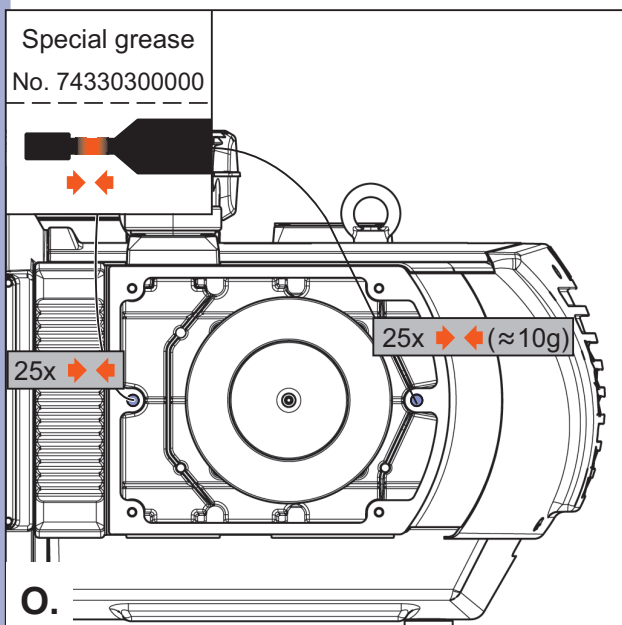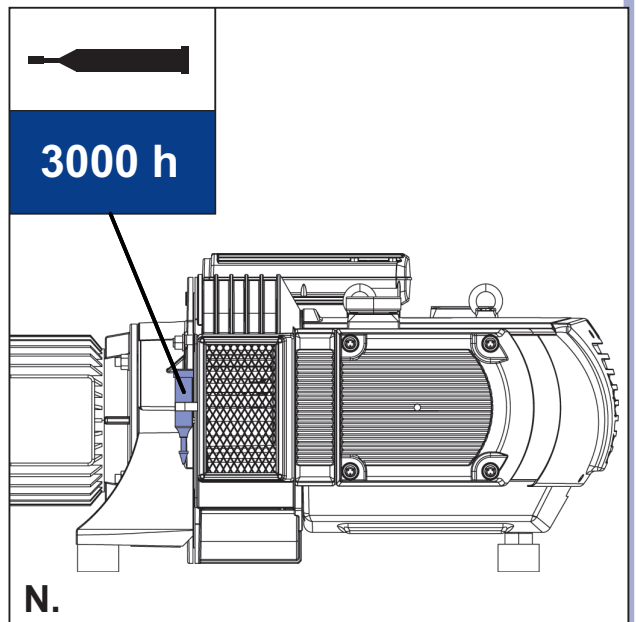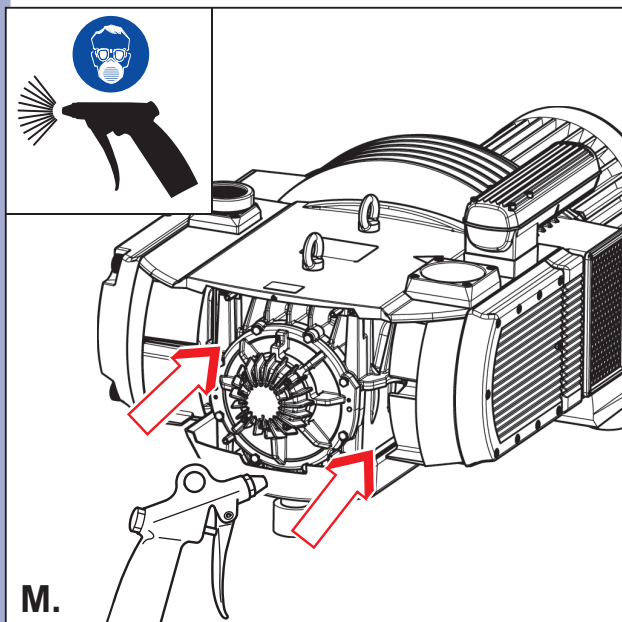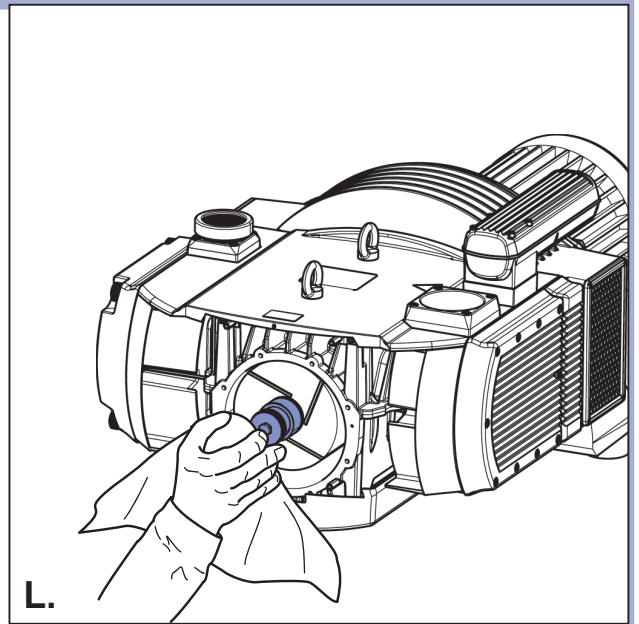

**BECKER**  
 Bedienungsanleitung    Diferențial  
 Operating instructions    Diferențialul  
 Instructions de service    Instrucțiunile  
 Manual de uso    Diferențialul  
 Handleiding    Instructie  
 Instrucciones para el montaje    Manual de montaje  
 Manual de instalação    Manual de instalação

[www.becker-international.com](http://www.becker-international.com)



Gebr. Becker GmbH  
 Hölker Feld 29-31  
 D-42279 Wuppertal  
[info@becker-international.com](mailto:info@becker-international.com)

**SERVICE**  
[www.becker-international.com](http://www.becker-international.com)  
 Sales and service network