

Betriebsanleitung  
Operating Instructions  
Instructions de service  
Istruzioni d'uso  
Handleiding  
Instrucciones para el manejo  
Manual de instruções  
Naudojimosi instrukcija  
Kasutusjuhend  
Lietošanas instrukcija  
Driftsinstruks  
Driftsinstruktioner  
Käyttöohje  
Driftsvejledning  
Instrukcja obsługi

Kezelési útmutató  
Návod k obsluze  
Navodilo za uporabo  
Návod na obsluhu  
Upute za rad  
Manual de operatii  
Teoracha Oibriúcháin  
Οδηγίες χρήσης  
El Kitabi  
Инструкции за експлоатация  
Инструкция по эксплуатации  
取扱説明書  
사용설명서  
使用说明书

**VTLF 2.200**  
**VTLF 2.250**  
**VTLF 2.360**

2006/42/EG









DIN EN ISO 14001:2005













DIN EN ISO 9001  
001929 QM

		<p><b>MAX. VACUUM</b></p>		mbar
			<p><b>MAX.</b></p>	
		<p>DIN EN ISO 3744</p>	<p><math>L_{pA} = 75-80</math> dB(A) - 50Hz <math>L_{pA} = 77-82</math> dB(A) - 60Hz <math>K_{pA} = 3</math> dB(A)</p>	

	<p>222-280 kg 490-617 lbs</p>	<p><math>A &gt; 400</math>mm <math>A &gt; 16</math>"</p>	<p><math>&gt; 5^{\circ}\text{C}/41^{\circ}\text{F}</math> <math>&lt; 45^{\circ}\text{C}/113^{\circ}\text{F}</math></p>	<p>max. 90%</p>	<p>max. 800m</p>
<p>1</p>	<p>2</p>				

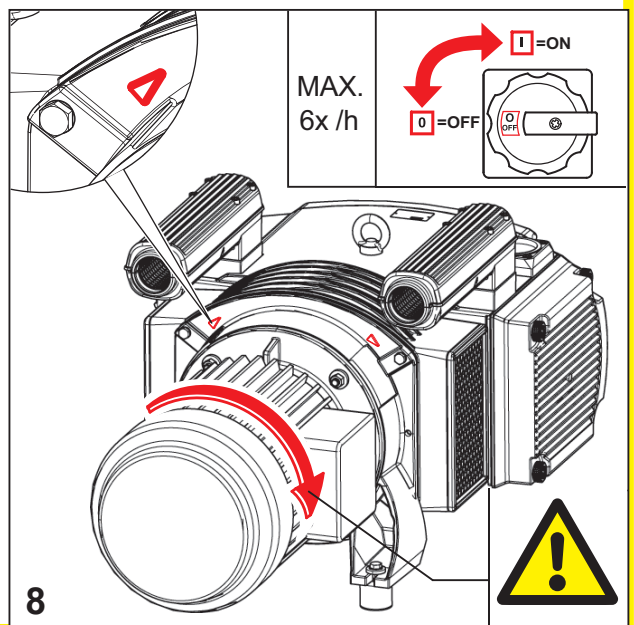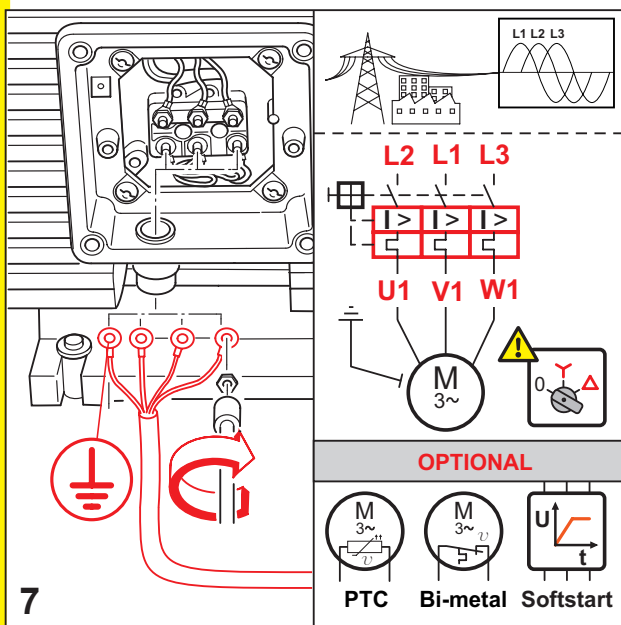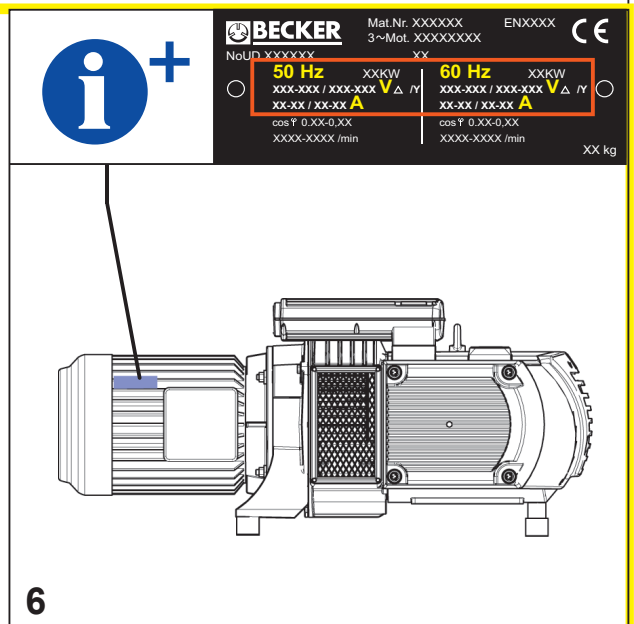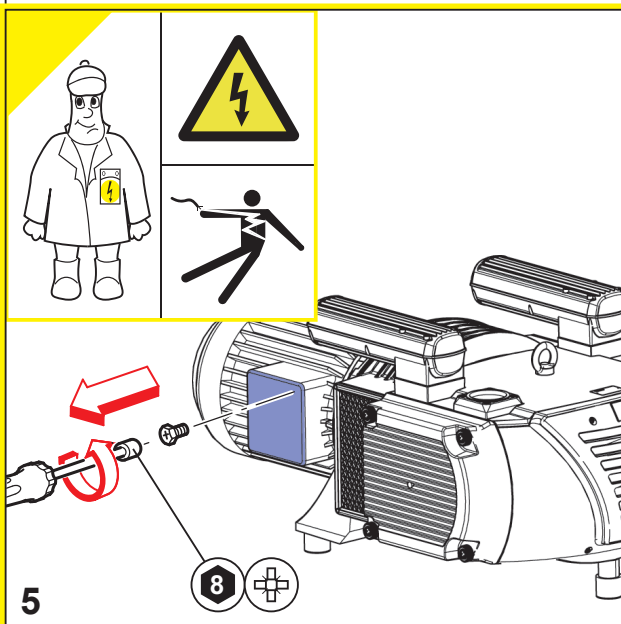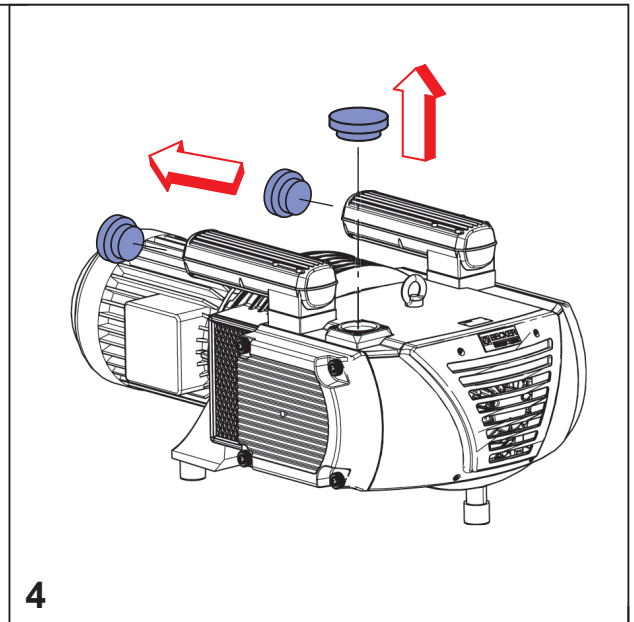
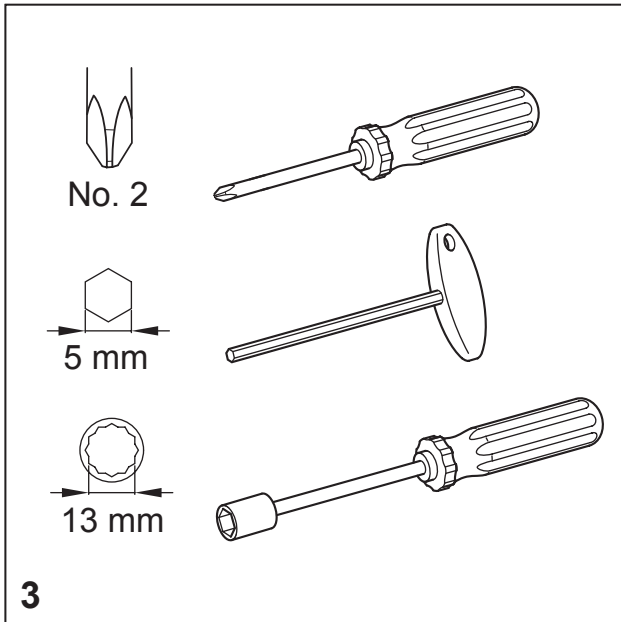


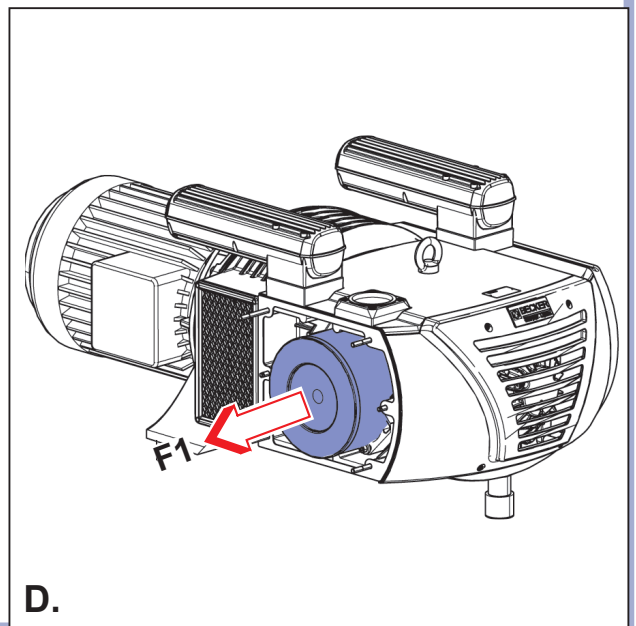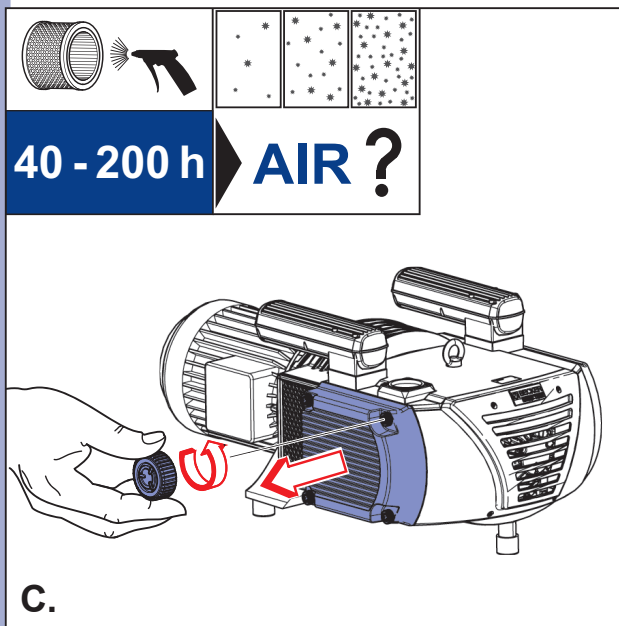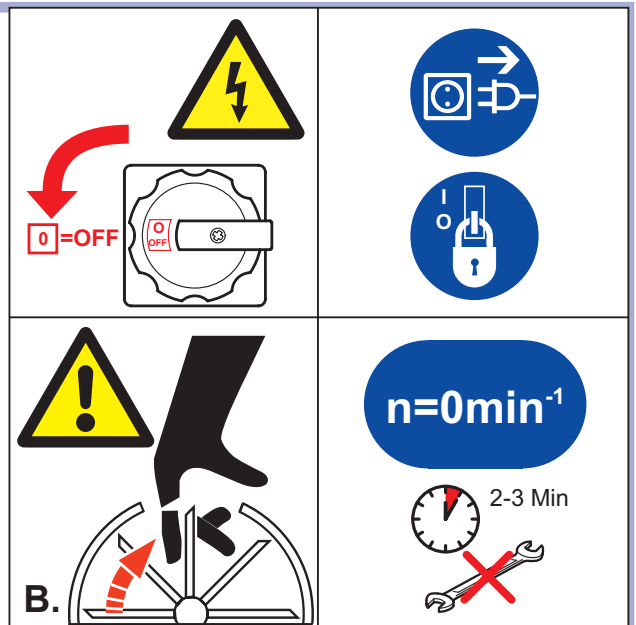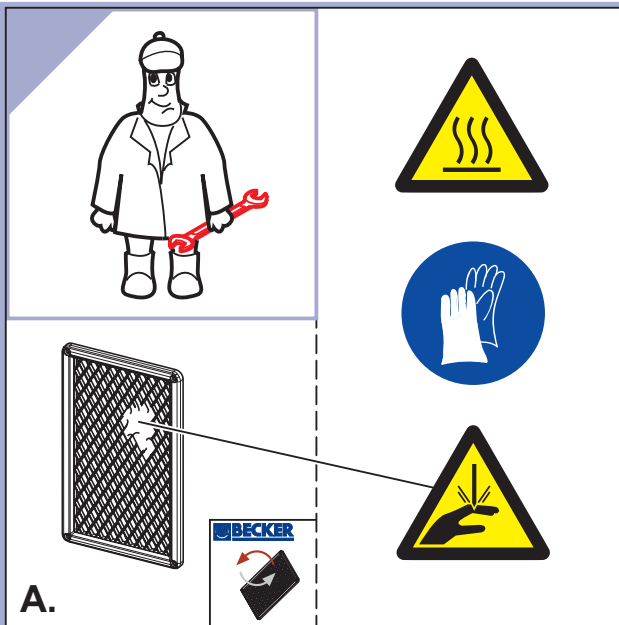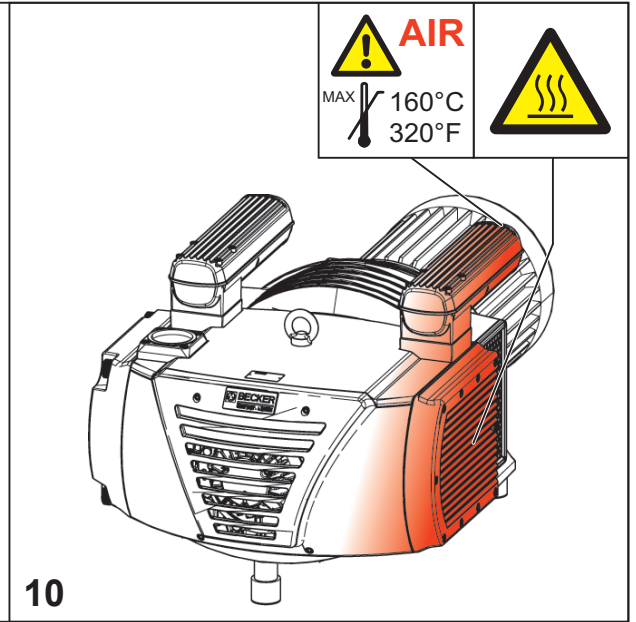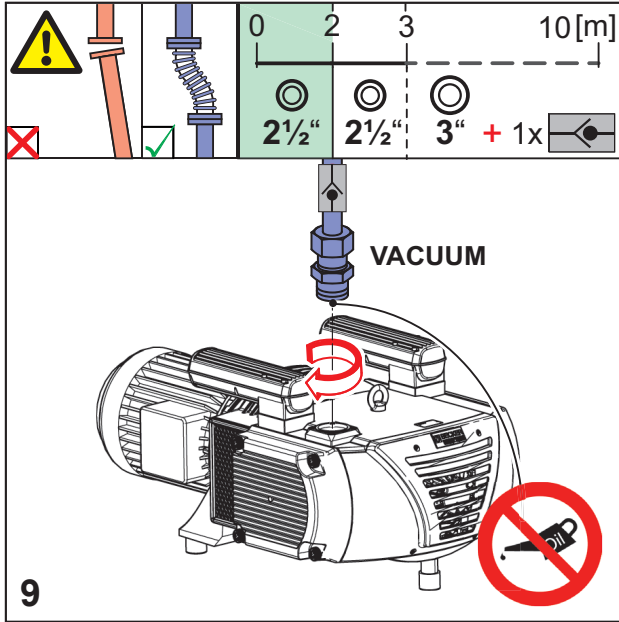


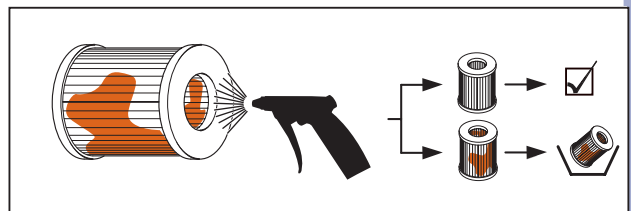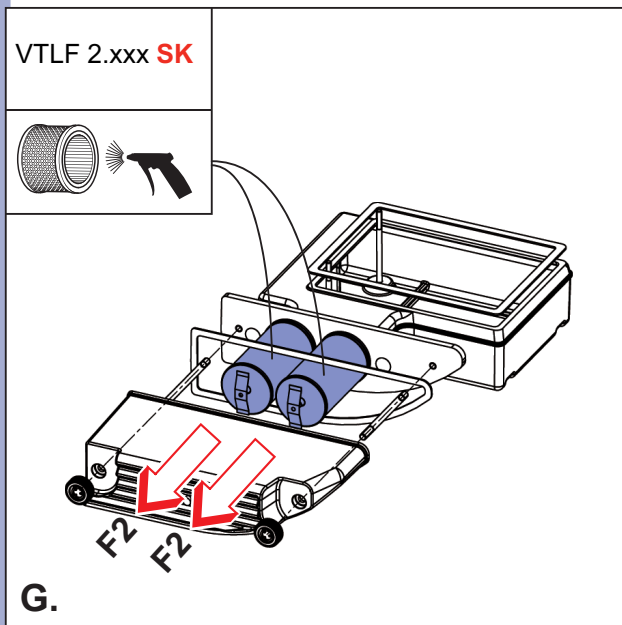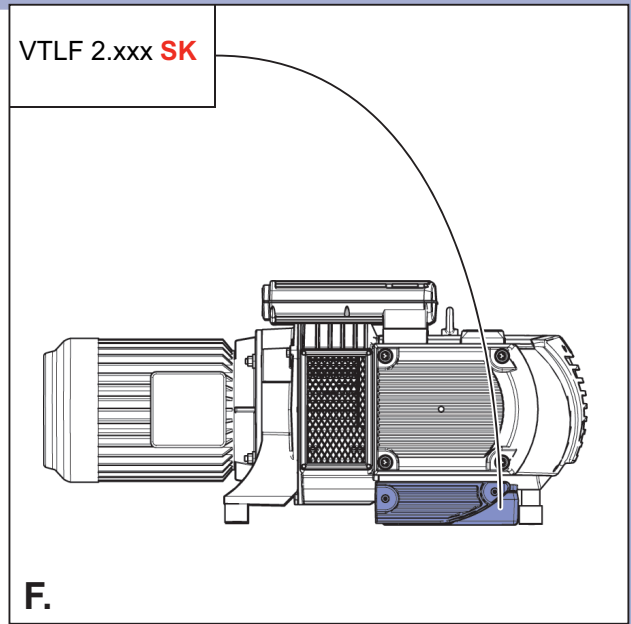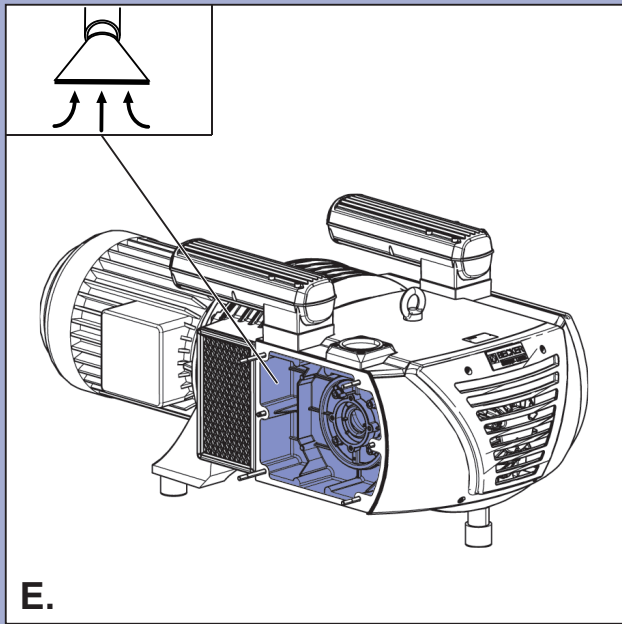





**F1:** D: 218 mm  
H: 122 mm  
No.: **90951200000**  
F1: (polyester)  
VTLF 2.xxx/6  
No.: **90959600000**  
F2: D: 64 mm  
H: 120 mm  
2x No.: **90951000000**

**EN149 - FFP3**  
42 CFR 84 - N100

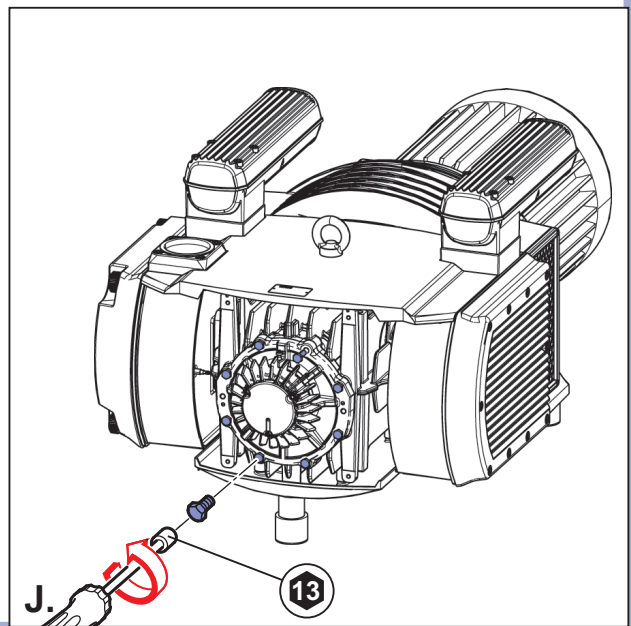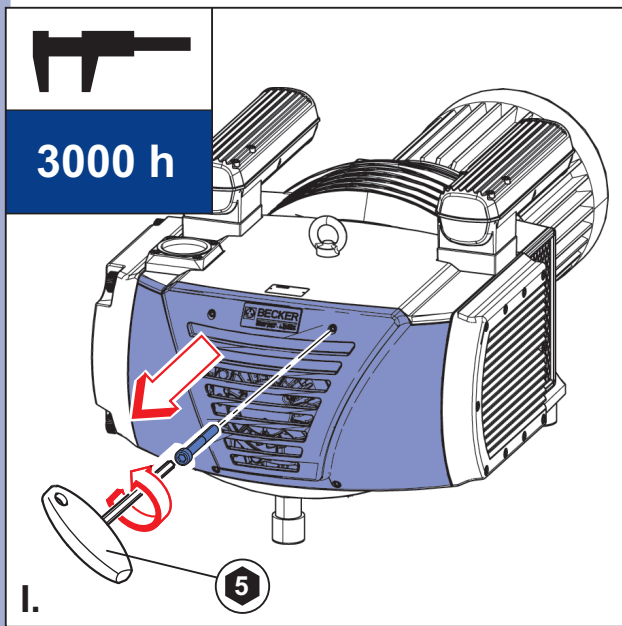

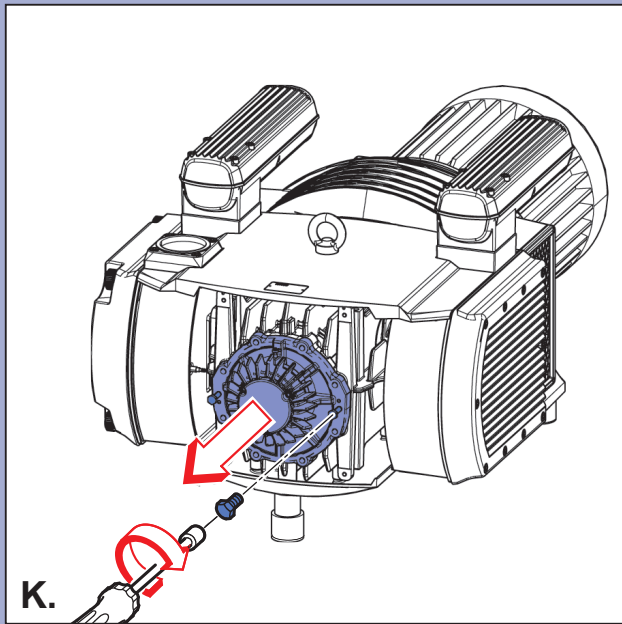

	<p> <math>A_{MAX} = 65\text{mm}</math>  <math>A_{MIN} = 41\text{mm}</math> </p> <p> <math>A_{\text{fan}} &lt; 41\text{mm}</math> </p>
<p> <b>VTLF 2.200/2.250</b> → No. 90136701005 (SET)  <b>L.</b> <b>VTLF 2.360</b> → No. 90132500005 (SET)         </p>	

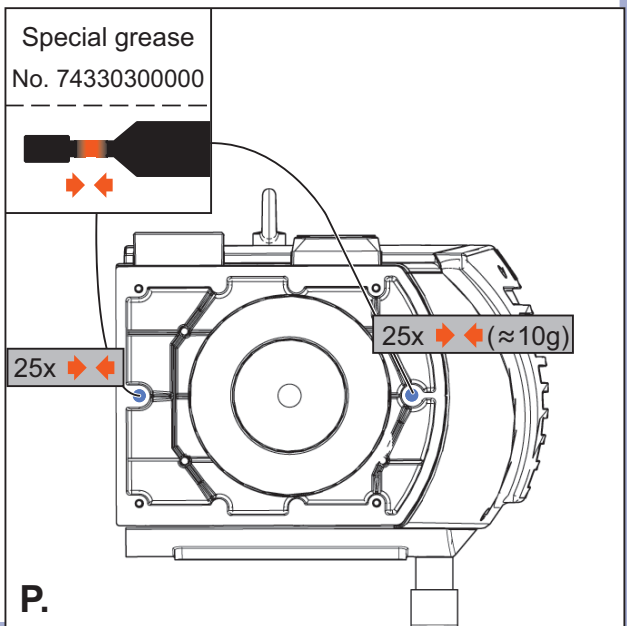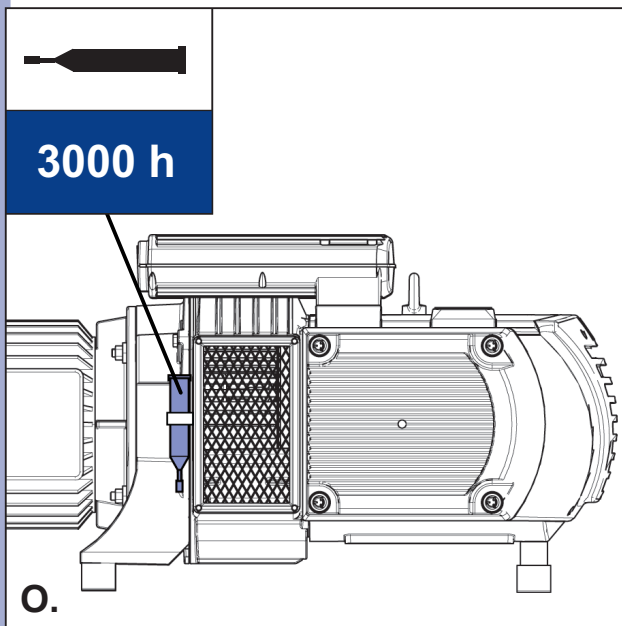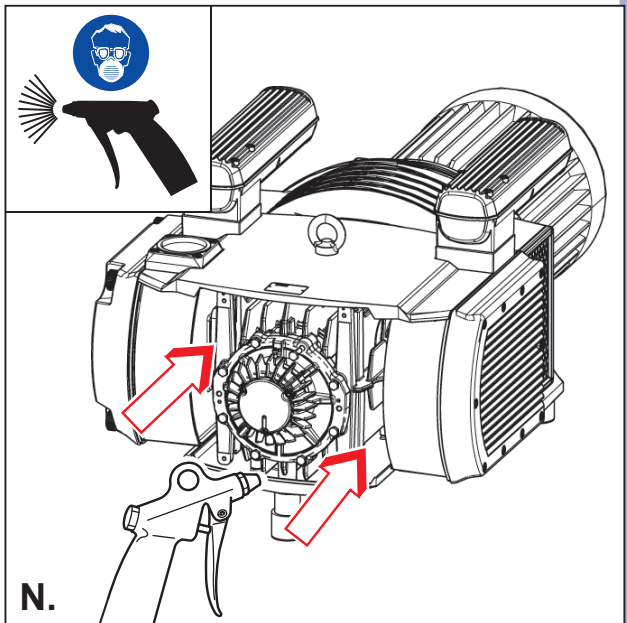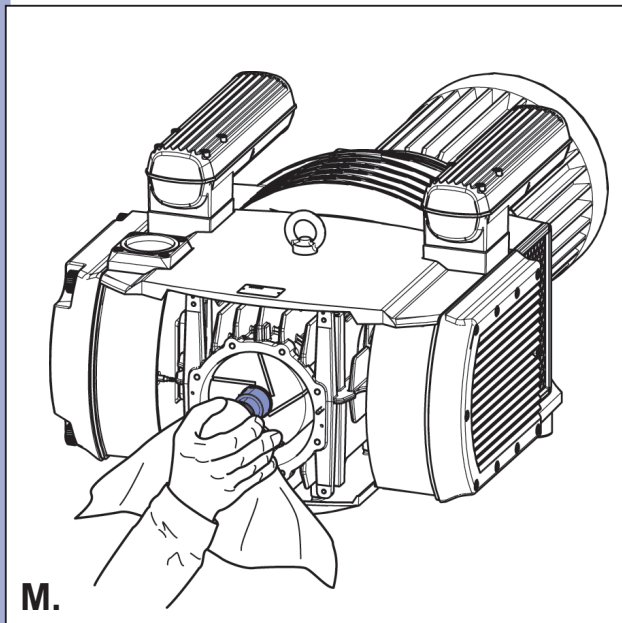

**BECKER**  
Becker-Handbuchs  
Operating instructions  
Instructions de service  
Manual de utilizare  
Manual de instrucciones  
Diffraktion  
Diffraktionskonstrukt  
Kalkulation  
Diffraktionsring  
Infrarotstrahlungs-  
Kontrolle  
Kontrolle  
Kontrolle

**?**

**i+**

[www.becker-international.com](http://www.becker-international.com)



Gebr. Becker GmbH  
Hölker Feld 29-31  
D-42279 Wuppertal  
[info@becker-international.com](mailto:info@becker-international.com)

**SERVICE**  
[www.becker-international.com](http://www.becker-international.com)  
Sales and service network