

**Product code**

CM-4/30F

**Product group**

Polyamide Folder-Gluer Belts

**Joining method**

Flexproof

**Contact**

Martin Nykl

**Edition date**

08/05/2024

**Status**

Option

**Important**

- Joining is also possible with other Habasit devices.
- Machine setting data should be derived from the relevant operating instructions.
- Read the operating instructions of the necessary tools carefully before making the first joint.
- All data are approximate values and defined under the following standard climatic conditions:
  - 23 °C/73 °F, 50% relative humidity (DIN 50005/ISO 554), working voltage 225-235 V / 105-115 V.
  - Any change of these data may require different temperature and/or time and/or pressure.
- For further support, please contact the Habasit company responsible for your location.

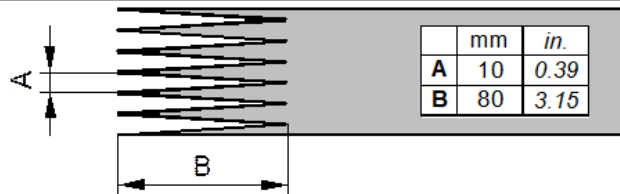
**Finger cutting**

Finger cutting device

AF-42 / AF-100US

**Dimensions**

Trim finger tips to assure optimal joining quality.



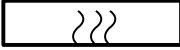
 
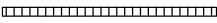

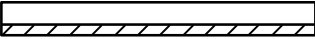

### Hot pressing

Hot pressing device	PF-61 / PF-62
---------------------	---------------

### Parameters

Belt/Tape width range	0 - 35 mm <i>0 - 1.4 inch</i>	> 35 - 50 mm <i>&gt; 1.4 - 2 inch</i>	> 50 - 60 mm <i>&gt; 2 - 2.4 inch</i>
Pressing temperature, top	180 °C <i>355 °F</i>	180 °C <i>355 °F</i>	180 °C <i>355 °F</i>
Pressing temperature, bottom	180 °C <i>355 °F</i>	180 °C <i>355 °F</i>	180 °C <i>355 °F</i>
Pressing time	8 min	10 min	10 min
Cooling time	8 min	10 min	10 min

### Inserts

Top		
6		Heating plate; top
5		Covering plate (offset for easier removal)
4		Teflon
3		Belt (conveying side up)
2		Guide rail (exactly centered in press)
1		Heating plate; bottom
Bottom		

Pressing remarks	<p>35-50 mm / 1.4-2.0 in. belt width: use guide rails with wide base plate. Cool belt/tape after hot pressing with appropriate cooling tong. If cover plate sticks to the belt: cut a strip of Teflon exactly the width of the belt (using the cover plate as a template) and place it on the belt.</p> <p>50-60 mm / 2.0-2.4 in. belt width: use guide rails with wide base plate.</p> <p>0-35 mm / 1.4 in. belt width: use guide rails with narrow base plate.</p>
------------------	--

### Product liability

This disclaimer is made by and on behalf of Habasit and its affiliated companies, directors, employees, agents and contractors (hereinafter collectively "HABASIT") with respect to the products referred to herein (the "Products"). SAFETY WARNINGS SHOULD BE READ CAREFULLY AND ANY RECOMMENDED SAFETY PRECAUTIONS BE FOLLOWED STRICTLY! Please refer to the Safety Warnings herein, in the Habasit catalogue as well as installation and operating manuals. All indications / information as to the application, use and performance of the Products are recommendations provided with due diligence and care, but no representations or warranties of any kind are made as to their completeness, accuracy or suitability for a particular purpose. The data provided herein are based on laboratory application with small-scale test equipment, running at standard conditions, and do not necessarily match product performance in industrial use. New knowledge and experience may lead to re-assessments and modifications within a short period of time and without prior notice.

EXCEPT AS EXPLICITLY WARRANTED BY HABASIT, WHICH WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, THE PRODUCTS ARE PROVIDED "AS IS". HABASIT DISCLAIMS ALL OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT, OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE, ALL OF WHICH ARE HEREBY EXCLUDED TO THE EXTENT ALLOWED BY APPLICABLE LAW. BECAUSE CONDITIONS OF USE IN INDUSTRIAL APPLICATION ARE OUTSIDE OF HABASIT'S CONTROL, HABASIT DOES NOT ASSUME ANY LIABILITY CONCERNING THE SUITABILITY AND PROCESS ABILITY OF THE PRODUCTS, INCLUDING INDICATIONS ON PROCESS RESULTS AND OUTPUT.